

J WRIGHT CONCEPTS

# RV Cable Grip


PATENT # US D786,661

- ◆ Slide the **Grip** over the coax cable connector and align the hex on the cable with the hex of the **Grip**.

## THIS IS AN IMPORTANT STEP

- ◆ Place the cup on the install tool as shown.
- ◆ Thread the install tool into the coax cable connector, hand tight.
- ◆ While holding the **Grip** and slowly start to turn the hex nut on the install tool, this will pull the coax cable connector through the **Grip**. A small adjustable wrench can be used to make this easier.
- ◆ Continue to tighten the hex nut until the coax cable connector is visible the slot of the cup.
- ◆ Hold the **Grip** and remove the tool from the coax cable connector .
- ◆ Repeat this procedure for the other end of the coax cable.

This image identifies the parts of the **RV Cable Grip** installation tool.

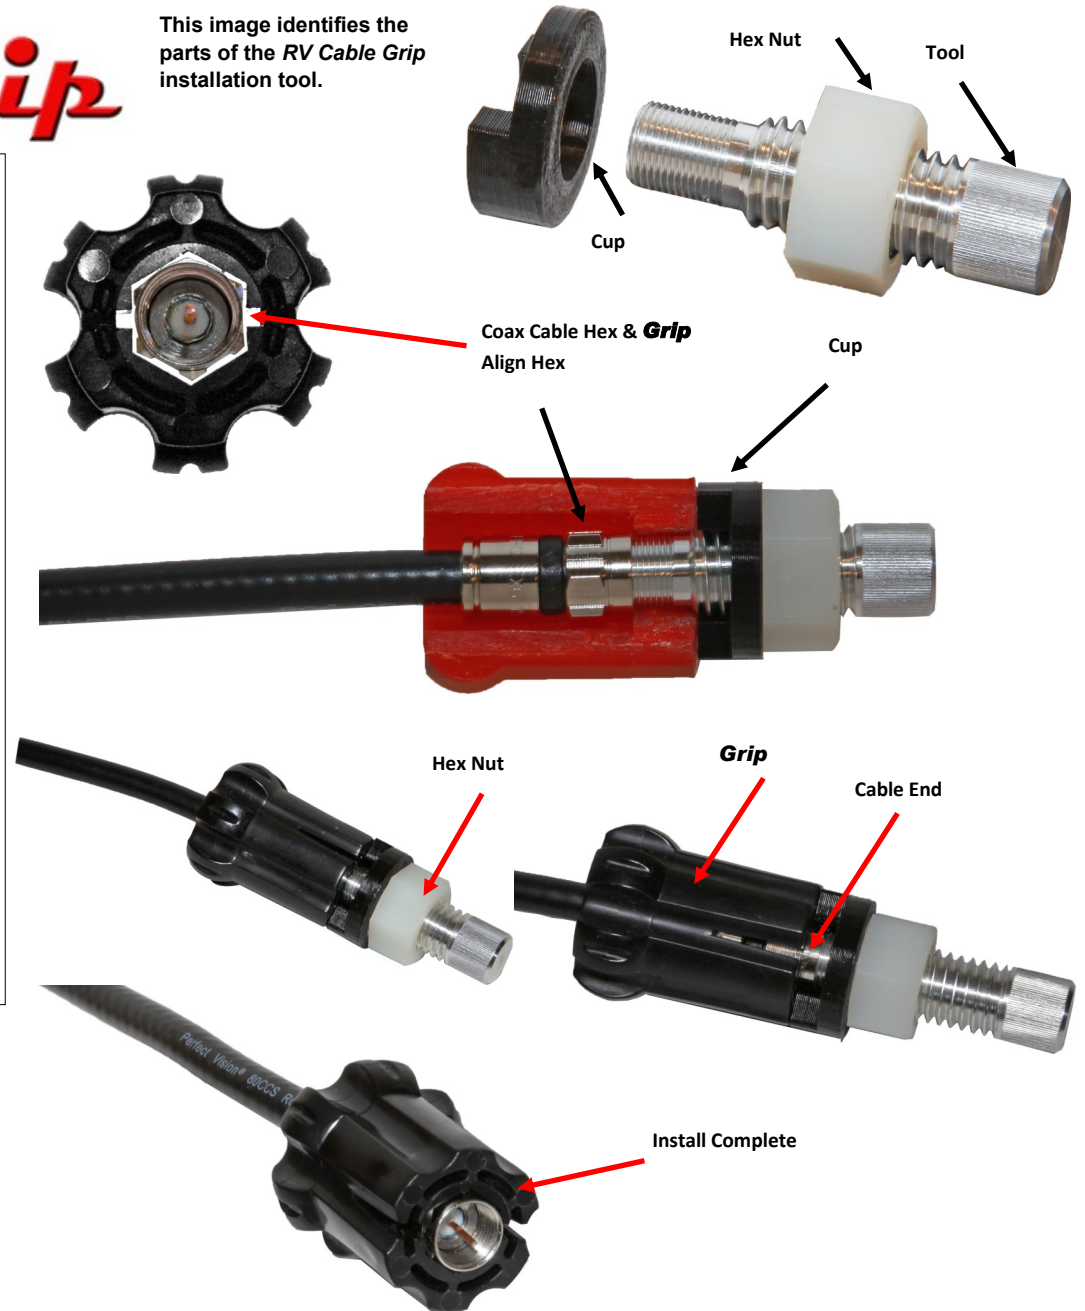

J Wright Concepts PO Box 292511 Sacramento CA 95829

916 955-0048 Email: [cablegripguy@gmail.com](mailto:cablegripguy@gmail.com)

On the Web: [www.rvcablegrip.com](http://www.rvcablegrip.com)